















SPIRAL

EN MANUAL FOR INSTALLATION  
 DE MONTAGE- UND GEBRAUCHSANLEITUNG  
 CZ NÁVOD K MONTÁŽI  
 RU ИНСТРУКЦИЯ ПО МОНТАЖУ  
 FR MANUEL DE FIXATION  
 SK NÁVOD K MONTÁŽI

ø92: L=500÷2900  
 ø137, 156: L=500÷3000

ø92: L=2901÷4500  
 ø137, 156: L=3001÷4500

ø92: L=4501÷6000  
 ø137, 156: L=4501÷6000

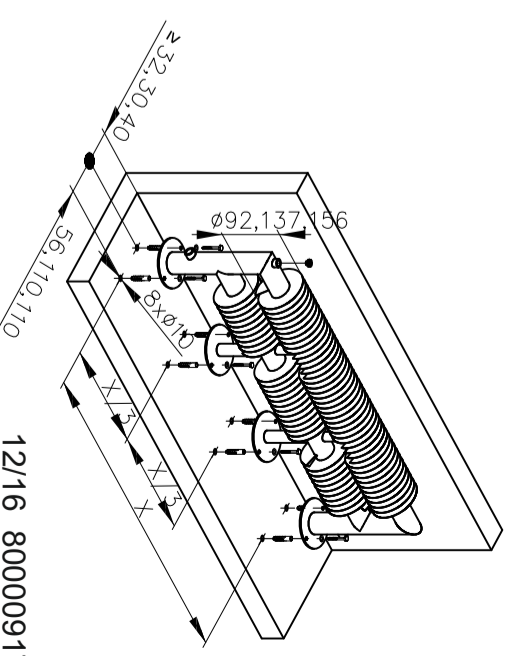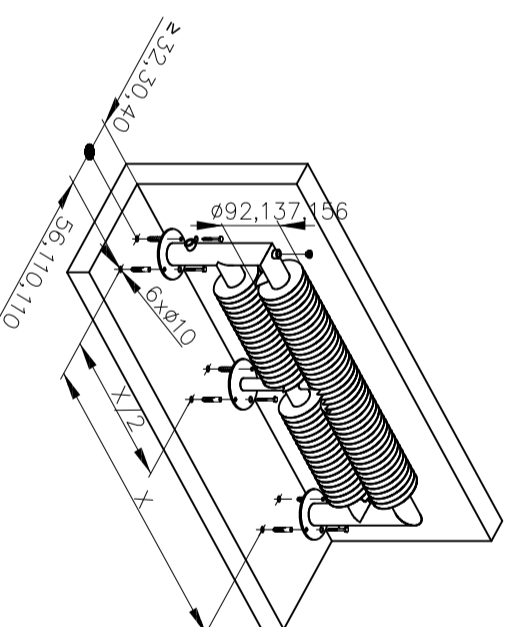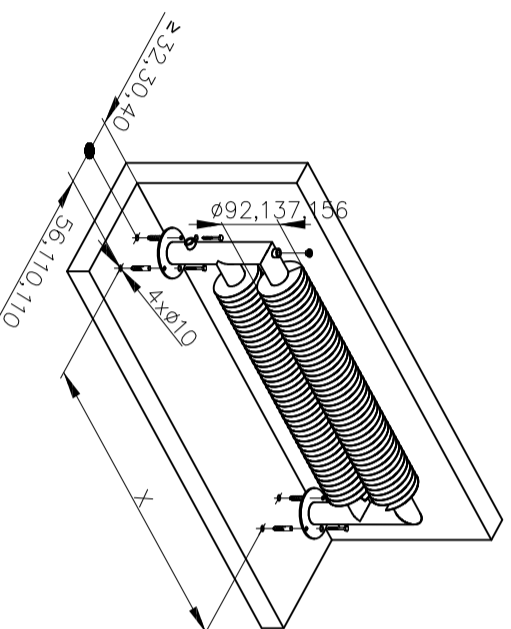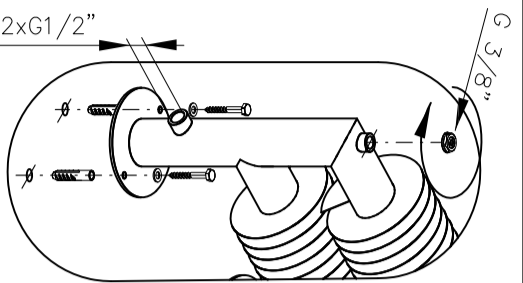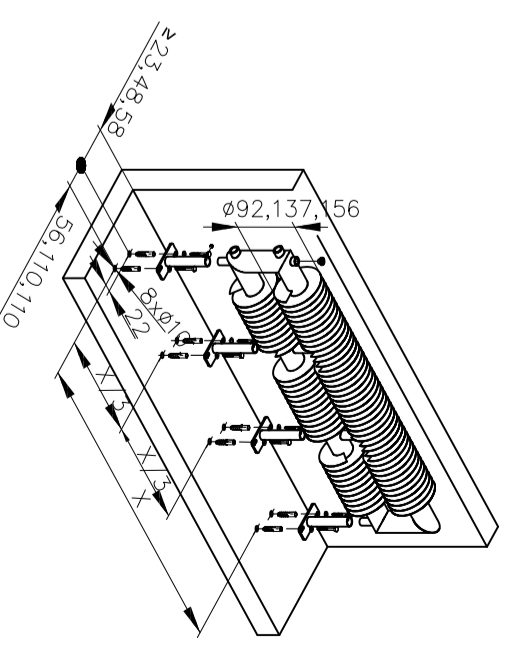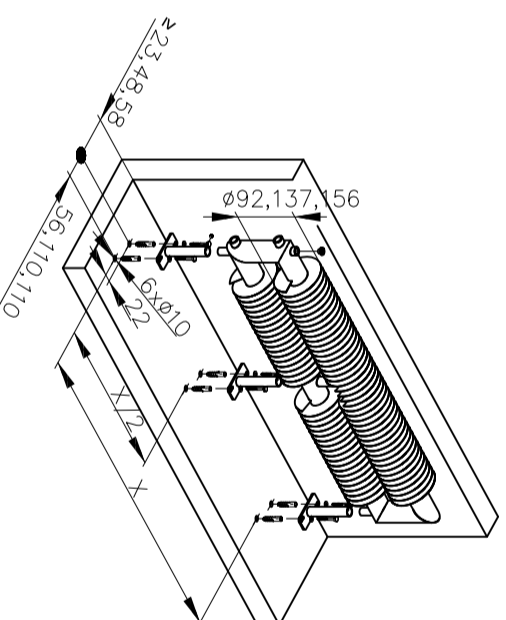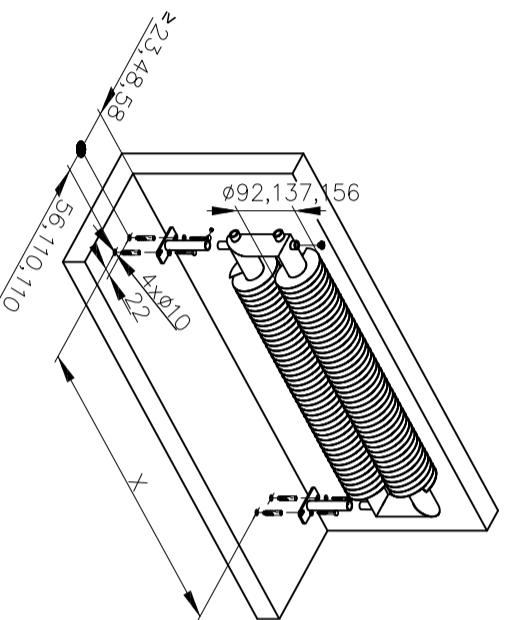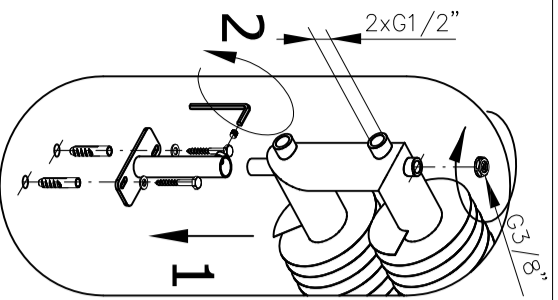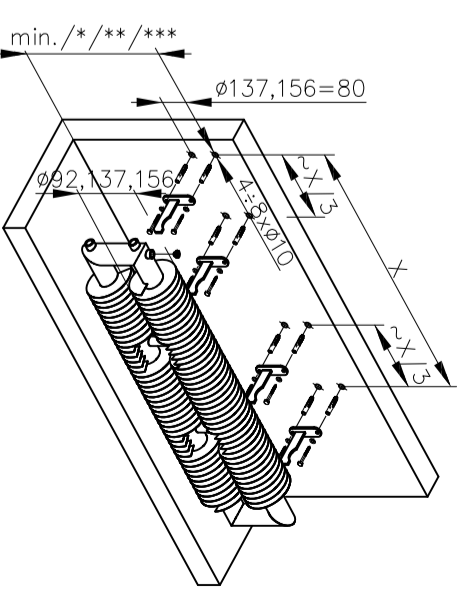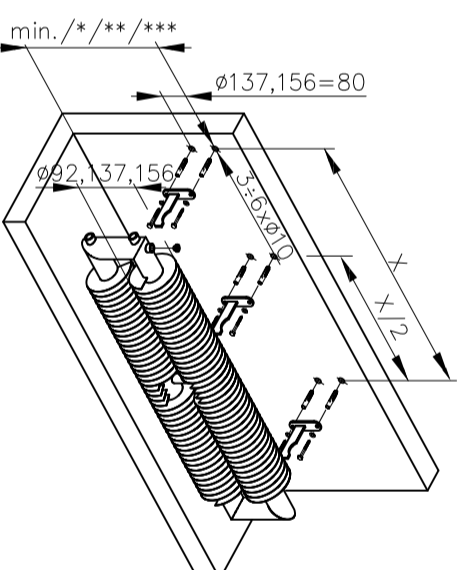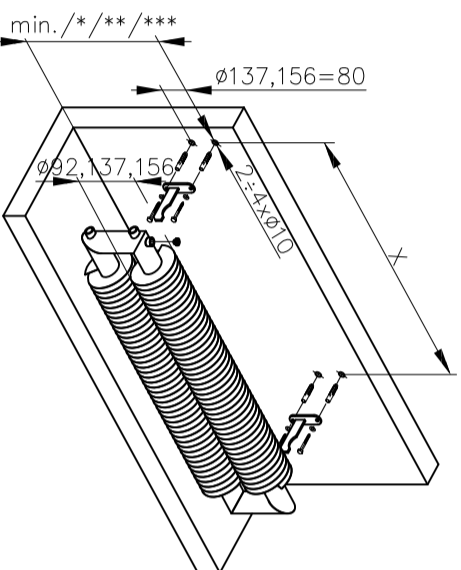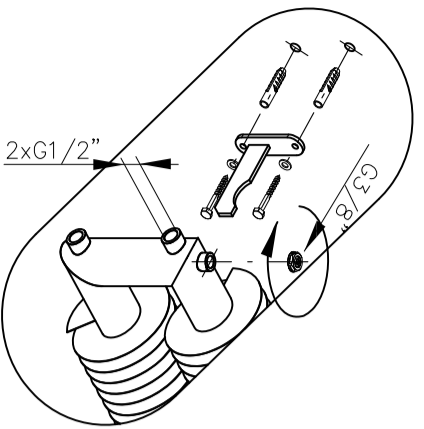

	RA1	RA02/RA12	RA03/RA13
ø92	*	**	**
ø137	190	335/336	480/482
ø156	202	402/368	602/534

